

Attaching Dim-Out Brushes to Perfect Fit Frames





Standard 19mm PVC Insulation Tape



6 x 5 Brush Strip (temposhade.com)



15 x 5 Brush Strip (temposhade.com)

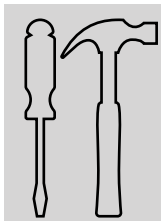



Snip Cutters

It is recommended that snips be used to cut the brush. Do not use a knife unless you are experienced in doing so.



Scissors




Flat Head Screwdriver

Step 1 - Fit the PVC Tape


Note: If retrofitting, it is assumed that you have already removed the frame from the window and the blind from the frame. Please watch our instruction video if you are unsure about how to do this.

The PVC tape should be fitted to the side rails only (position marked in red), with the edge fitted against the front wall of the frame. Black tape should be used.

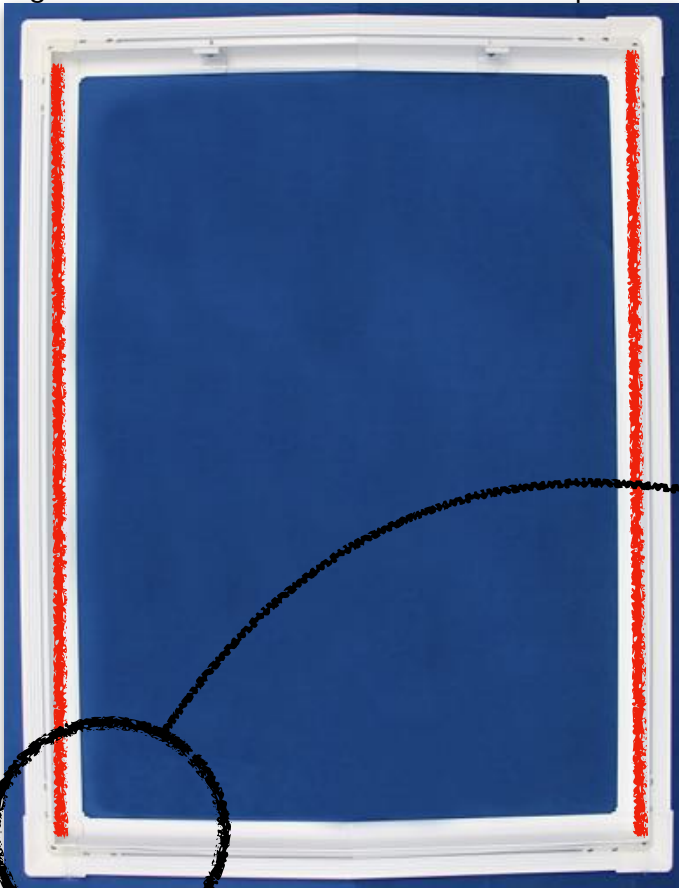



Don't worry if it's not a super neat, after the brushes are fitted any imperfections won't be noticed.

Be sure to fit the tape to the full length of the inner frame (top to bottom). The black tape will help to absorb light and glare reflection.

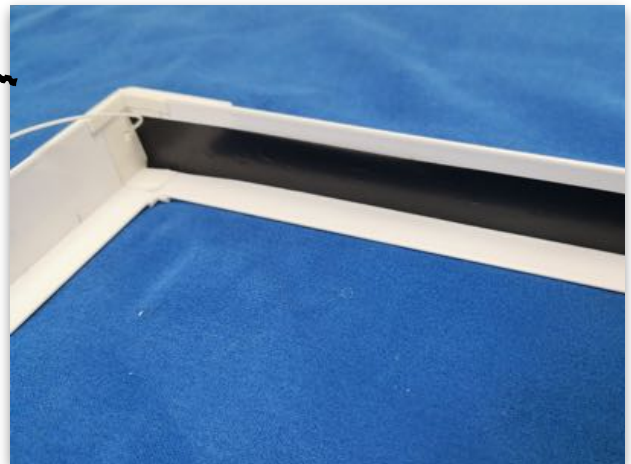


Step 2 - Fit the 6mm x 5mm Brush Strips


Attach the 6mm x 5mm brush to the inside of the frame for an effective dim-out when using cellular fabric.

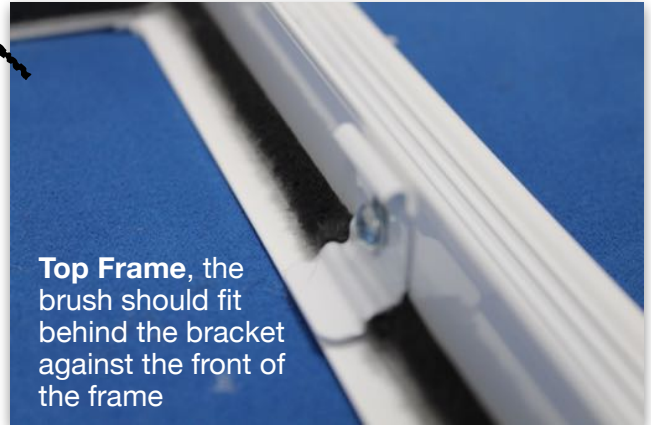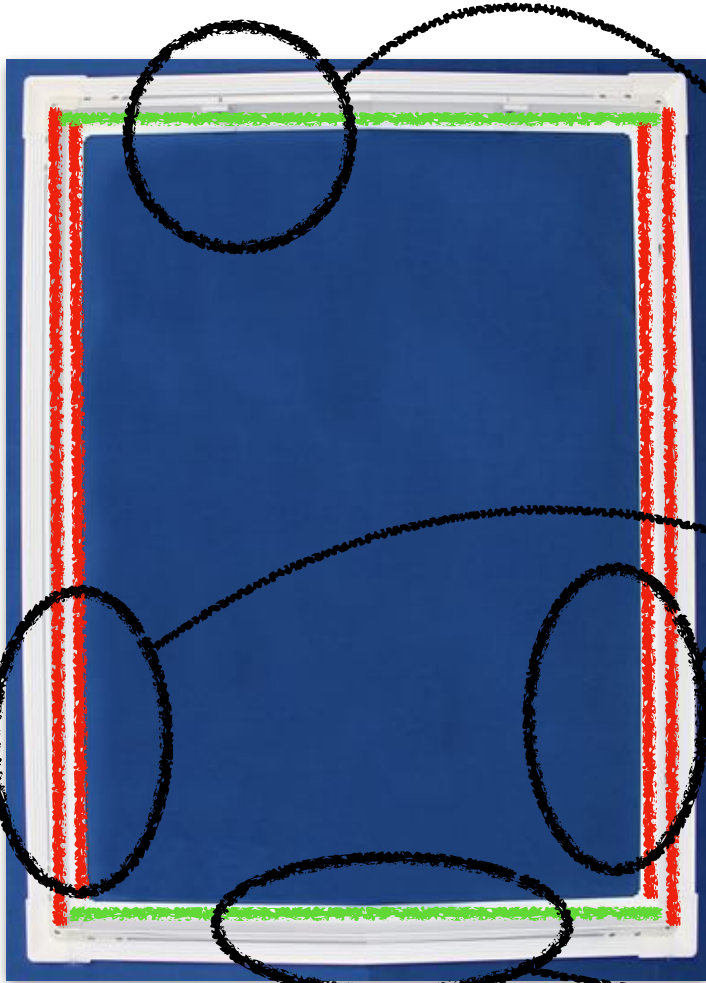

Top Frame, the brush should fit behind the bracket against the front of the frame

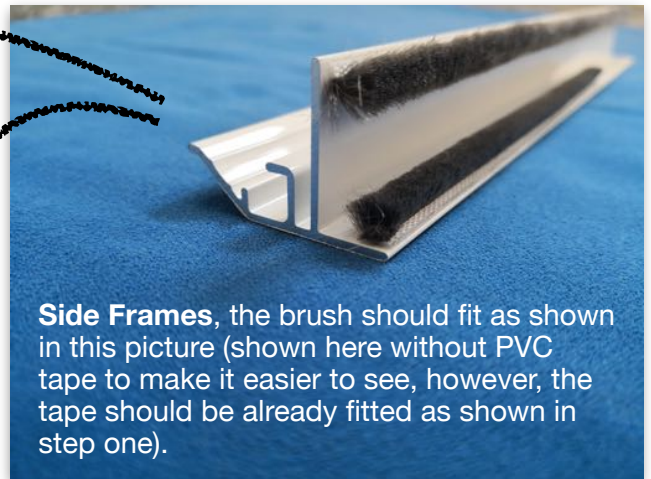

Side Frames, the brush should fit as shown in this picture (shown here without PVC tape to make it easier to see, however, the tape should be already fitted as shown in step one).

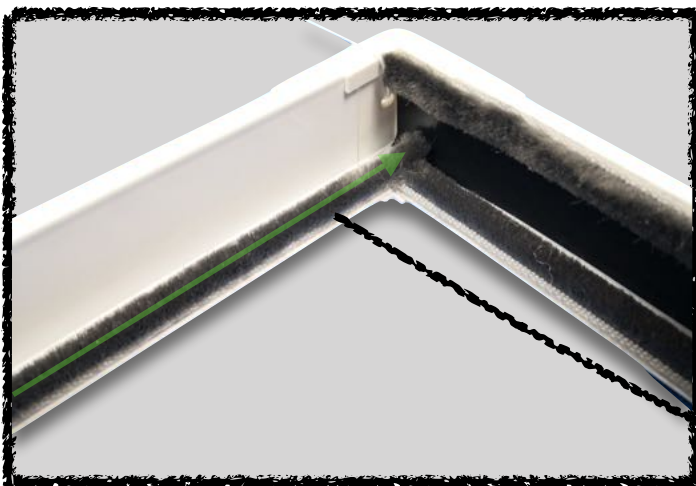

For the bottom frame, it is advisable to run the brush to the full width of the frame and stop the side frame brushes just before it as shown in the picture (left).



The installation is now complete and you can refit the frame to the window, however, if you still have an annoying glow coming from behind the frame, you can take a look at the next page and consider fitting brush strip to the back of the frame also.

Optional Step 3 - Fit the 15mm x 5mm Brush Strips

Attaching the 15mm x 5mm brush to the back of the Perfect Fit frame will help absorb light that may penetrate between the window and the frame.

Please note: It is not possible to make your blind 100% blackout. Using the methods shown in this document will provide a noticeable and effective dim-out solution, which most people will find more than acceptable as a form of 'blackout'.

The brush strip should be fitted in the position shown on the photo and indicated by the red line

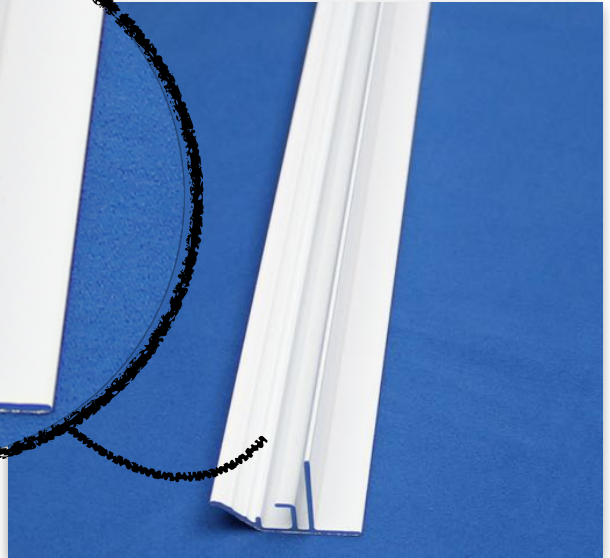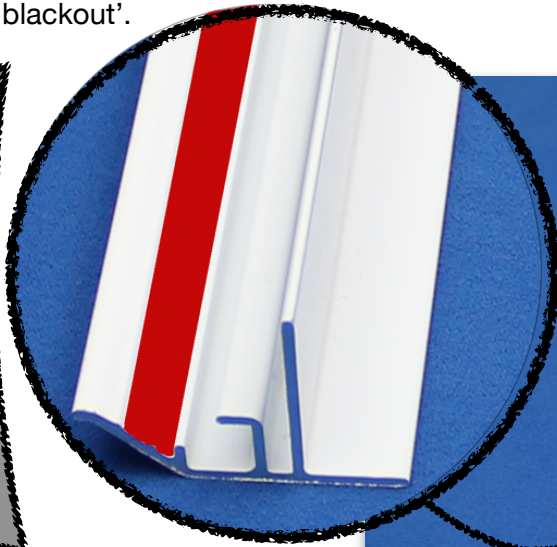

Instruction Video

